

PARTS LIST

for



**30" ELECTRIC
FREESTANDING
RANGE
SELF-CLEAN OVEN
DESIGNER STYLE
MODEL
RF366PXYW0**

▲W-White with Black Glass Ceramic Cooktop
N-Almond with Black Glass Ceramic Cooktop
B-Black with Black Glass Ceramic Cooktop
Q-Designer White with White Glass Ceramic Cooktop



FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS




Whirlpool CORPORATION

Benton Harbor, Michigan.

© 1992 WHIRLPOOL CORPORATION

COOKTOP AND CONTROL PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

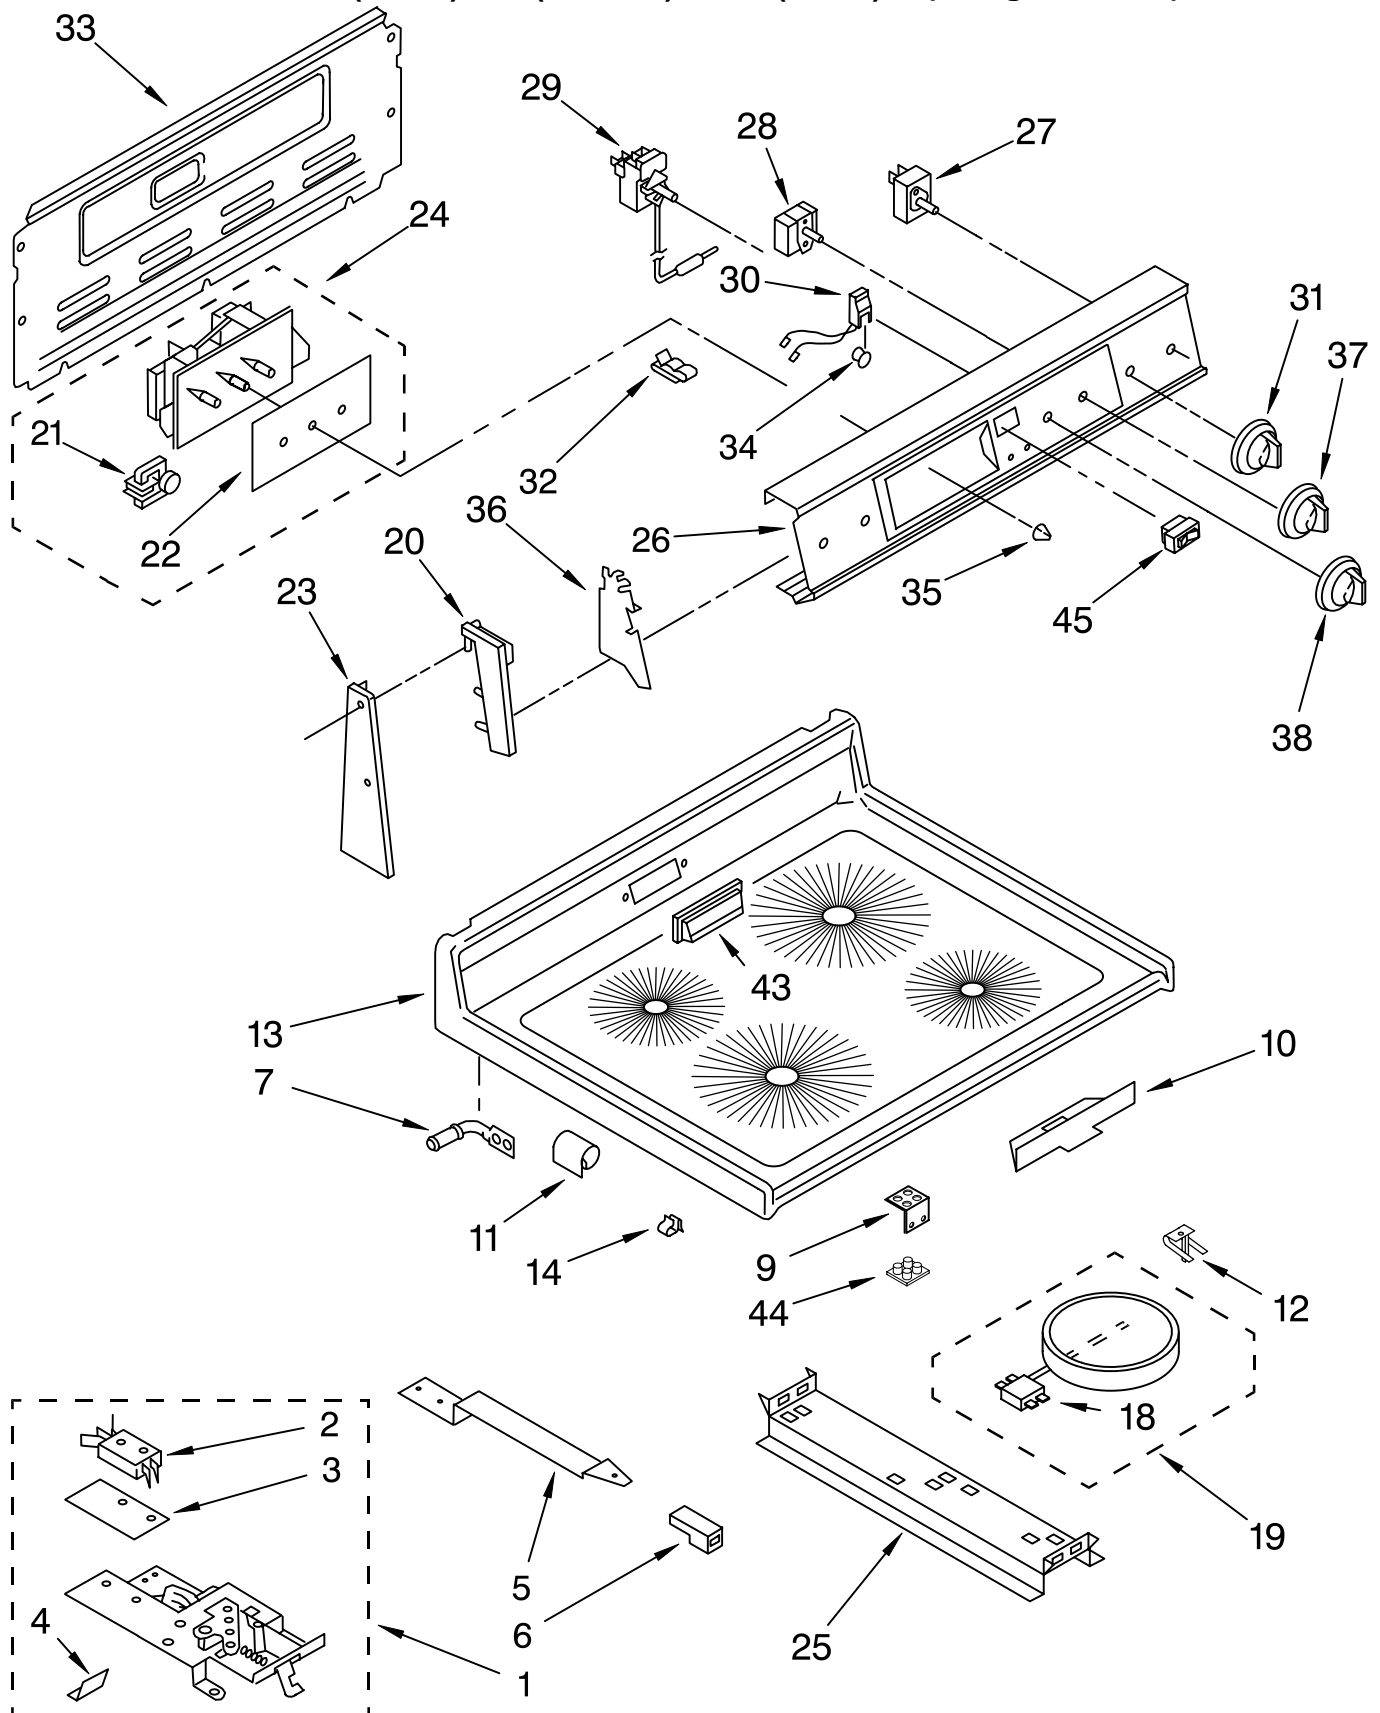

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP AND CONTROL PARTS


For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			18		Limiter, Temp.	31		Infinite Control Knob (4)
	1	3171153 Latch Assembly		3149129	180 MM – LR		3183118	White/Almond/Black
		343641 Screw,		3183972	200 MM – RF		3183117	Designer White
		10–16 x 1/2 (2)		3183974	230 MM – RR	32	313570	Clip, Tube
	2	308185 Safety Switch	19	3183973	250 MM – LF	33	313195	Cover, Control
		98106 Screw (2)			Element, Surface (Includes No. 18)		343641	Screw,
	3	309245 Insulator, Switch		3183646	180 MM – LR			10–16 x 1/2 (8)
	4	313035 Shield, Latch		3183647	200 MM – RF	34	313101	Lens, Amber (2)
		Terminal		3183648	230 MM – RR	35		Timer Knob (3)
		309258 Screw,		3183649	250 MM – LF		3169182	White/Almond/Black
		6 x 3/8B (2)	20	313230	End Cap R.H.		3169184	Designer White
	5	Handle, Latch		313231	End Cap L.H.	36	313608	Shield, Glass (2)
		Black		254225	Screw (4)		246132	Screw,
		3169081 Black	21	309822	Motor, Timer			8A x 3/8 (2)
		3150175 Designer White		246132	Screw (2)	37		Selector Knob
		308422 Screw,	22	313513	Glass, Timer		3183115	White/Almond/Black
		10–24 x 1/2 (2)	23	313191	End Trim R.H		3183116	Designer White
	6	Latch Knob		313190	End Trim L.H	38		Thermostat Knob
		Black		254225	Screw (4)		3183103	White/Almond/Black
		3148684 Black	24		Timer, Clock		3183104	Designer White
		3150174 Designer White		3183063	Black with Chrome	43		Cover, Vent
		155023 Screw		3183064	Designer White		3149011	White
	7	307966 Pin, Top (2)		246132	Screw (2)		3149012	Almond
		343641 Screw,	25	3148809	Bracket, Mounting		3181829	Black
		10–16 x 1/2 (2)		98520	Screw (6)		3149190	Clip (2)
	9	3149032 Bracket, Light	26		Control Panel	44	3149029	Light, Indicator
		98520 Screw (2)		3184400	White/Almond/Black	45		Rocker Switch
	10	3149262 Shield, Probe		3184401	Designer White		3182717	White/Almond/Black
	11	307965 Bracket, Top (2)		312604	Screw (4)		3149360	Designer White
		343641 Screw,	27		Switch, Infinite	LITERATURE PARTS		
		10–16 x 1/2 (4)		3148952	LR & RF	LIT3147395	Installation	
	12	3149191 Spring,		3148955	LF & RR		Instructions	
		Element (8)		311865	Screw (8)	LIT3183555	Wiring Diagram	
		246119 Screw (8)	28	3148419	Switch, Selector	LIT3182687	Video,	
	13	Cooktop		3150344	Screw, (2)		Ceran Cooktop	
		White	29	3148933	Thermostat, Oven		Guide, Use & Care	
		3176527 White		311932	Screw,	LIT3150263		
		3176528 Almond			6–32 x 1/4 (2)	LIT885014	Repair Parts List	
		3176529 Black	30		Light, Indicator			
		3176530 Designer White		3183695	(Surface Unit)			
		98520 Screw (10)		314031	(Oven Unit)			
	14	311311 Clip, Wire						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

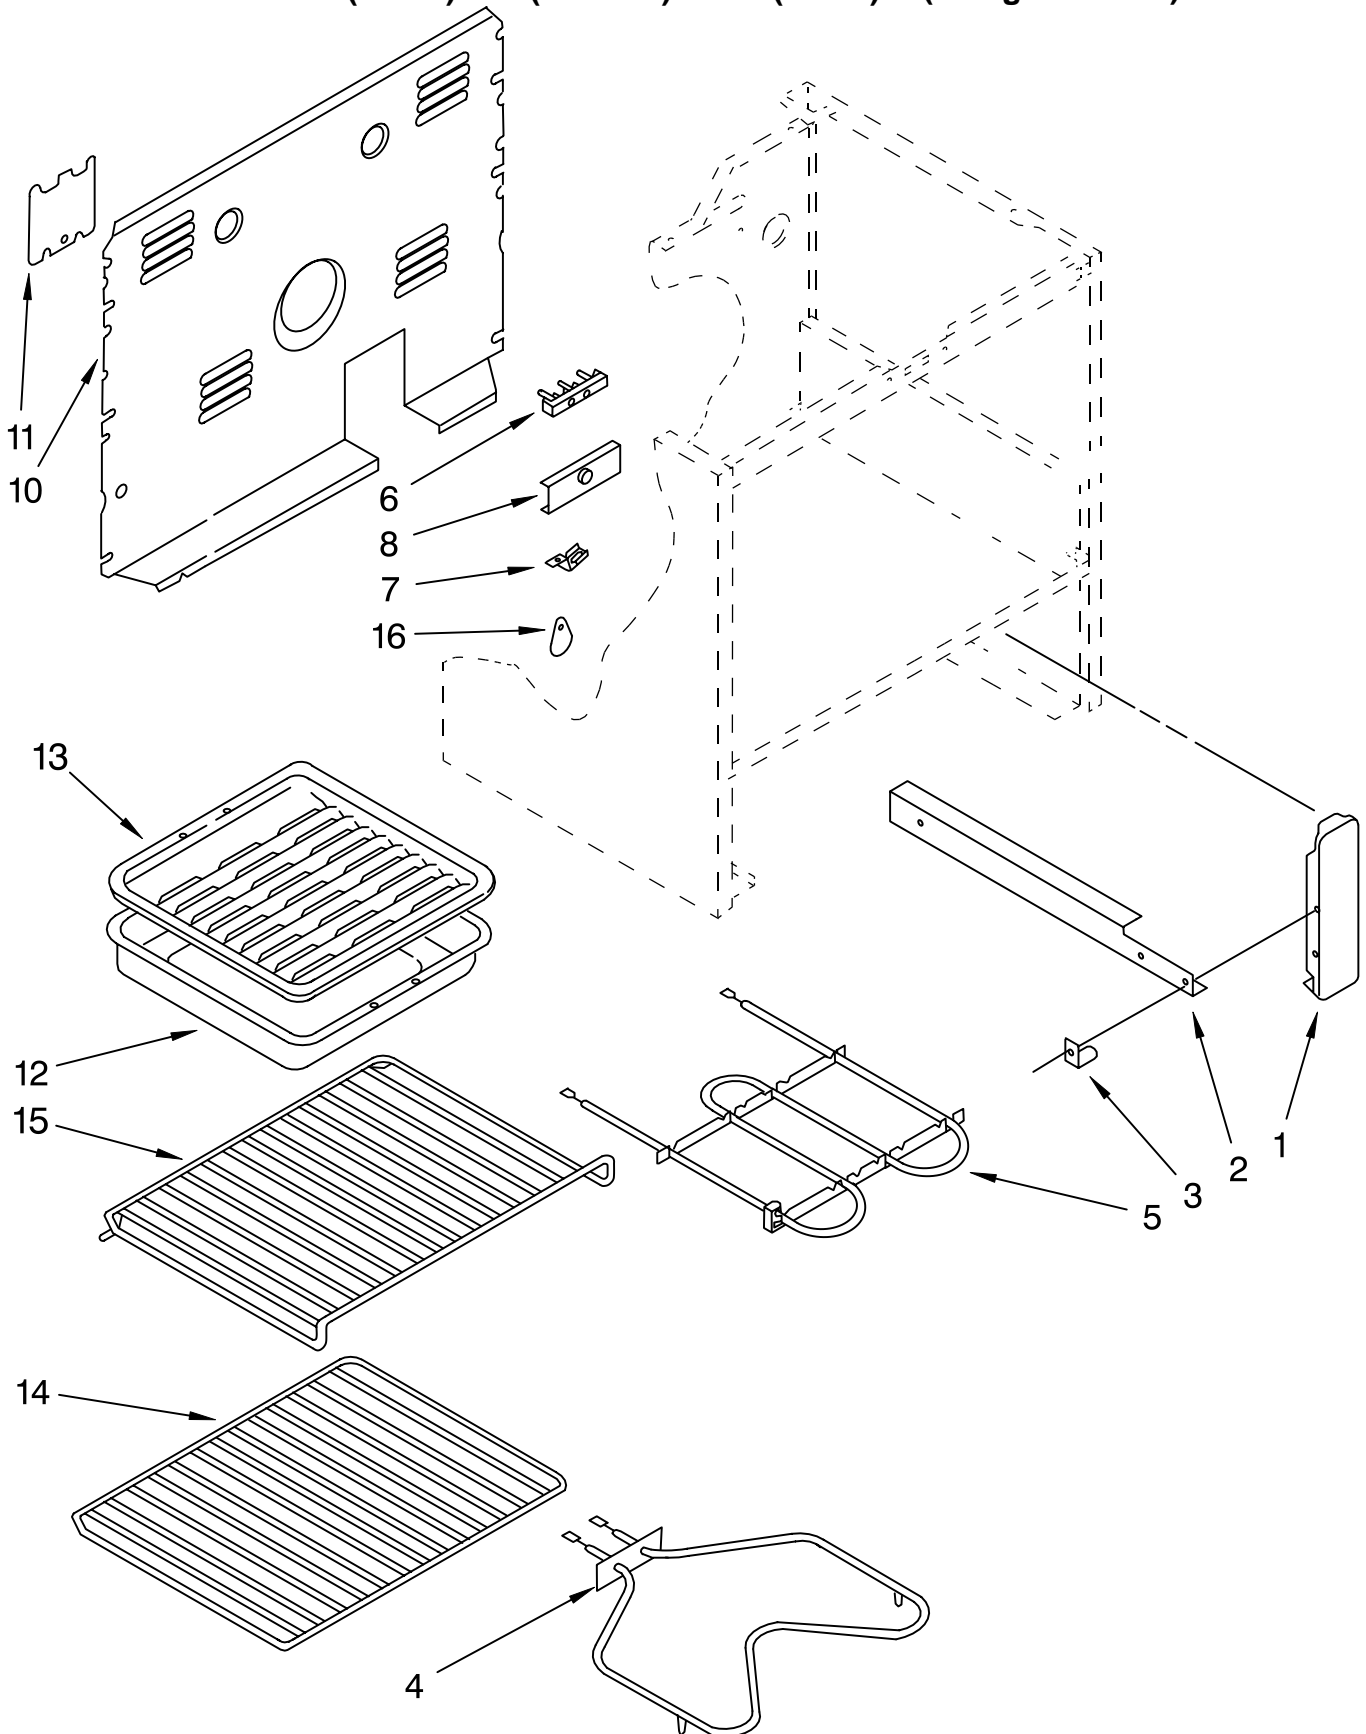

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

Illus. Part			Illus. Part			Illus. Part		
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			5	660579	Unit, Broil	12	3169076	Pan, Broiler
				3150532	Screw, 10–32 x 7/16 (2)	13	3147563	Rack, Broiler
			6	258076	Terminal Block	14	308173	Rack, Oven (Straight)
				98884	Screw, 10–16 x 1 (2)			
1	307981	Bracket, Mounting (2)		112432	Nut (6)	15	308172	Rack, Oven (Offset)
	343641	Screw (5)				16	311982	Plate, Cover (2)
2	3149255	Rail R.H.	7	308498	Ground Strap		3150532	Screw, (2)
	3149256	Rail L.H. (Includes Illus. 3)		313660	Clip			10–32 x .437
				690989	Screw, 10–32 x 1/2	17	312804	Block, Balance
	343641	Screw, 10A x 1/2 (2)	8	3150190	Bracket, Service		340184	Screw (1)
				343641	Screw, 10–16 x 1/2 (2)			10–16 x 1 1/2
3	3149257	Glide, Front (2)	10	3148975	Cover, Rear	Following Parts Not Illustrated		
	307748	Screw (2)		343641	Screw, 10–16 x 1/2 (7)		3169093	Insulation, Wrapper
4	661170	Unit, Bake						
	3150532	Screw, 10–32 x 7/16 (2)	11	307972	Cover, Service		3169094	Insulation, Oven Back
				343641	Screw, 10–16 x 1/2 (2)		814148	Anti–Tip Kit
							3183488	Scraper, Glass


OPTIONAL PARTS NOT INCLUDED

Illus. Part		Illus. Part		Illus. Part	
No.	No.	No.	No.	No.	No.
DESCRIPTION		DESCRIPTION		DESCRIPTION	
SPLICING WIRES--25FT.		PAINT, TOUCH-UP (1/2oz.)		PAINT, BULK (1 qt.)	
<u>LENGTH</u>					
242820	Wire, Black 14 Ga. 150 ¢	72017	White	799344	White (Uncut)
242821	Wire, Blue 14 Ga. 150 ¢	72107	Almond	978883	Almond (Uncut)
242822	Wire, Brown 14 Ga. 150 ¢	72109	New Avocado	261887	Coffee (Uncut)
242830	Wire, Brown 14 Ga. 200 ¢	72108	Coffee	261891	Harvest Gold (Uncut)
242823	Wire, Green 14 Ga. 150 ¢	72110	Harvest Gold	285367	Toast (Uncut)
242824	Wire, Orange 14 Ga. 150 ¢	72112	Toast	285368	Platinum (Uncut)
242829	Wire, Red 12 Ga. 150 ¢	72113	Platinum	* * Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.	
242825	Wire, Red 14 Ga. 150 ¢	** 511873	White Porcelain (2 Oz.)		
242831	Wire, Red 14 Ga. 200 ¢	PAINT, PRESSURIZED SPRAY		REFINISHING MATERIAL	
242826	Wire, White 14 Ga. 150 ¢	<u>(13 oz.)</u>			
242827	Wire, Yellow 14 Ga. 150 ¢	350930	White	799832	Kit, Porcelain Repair (White)
242832	Wire, Yellow 14 Ga. 200 ¢	350956	Almond	242756	Touch-Up Self-Clean (1/2 Pt.)
		261888	New Avocado	261582	Grease
		261886	Coffee	INSULATION	
		261890	Harvest Gold	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
		285365	Toast	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
		285366	Platinum		
		285006	Superior Black		
		206922	Primer (White)		
		206925	Leveler (Thinner) (2 Oz.)		
		ACCESSORY PARTS			
		241430	Foil, Aluminum Oven (18" x 25')		
		814009	Glass Cleaner		

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

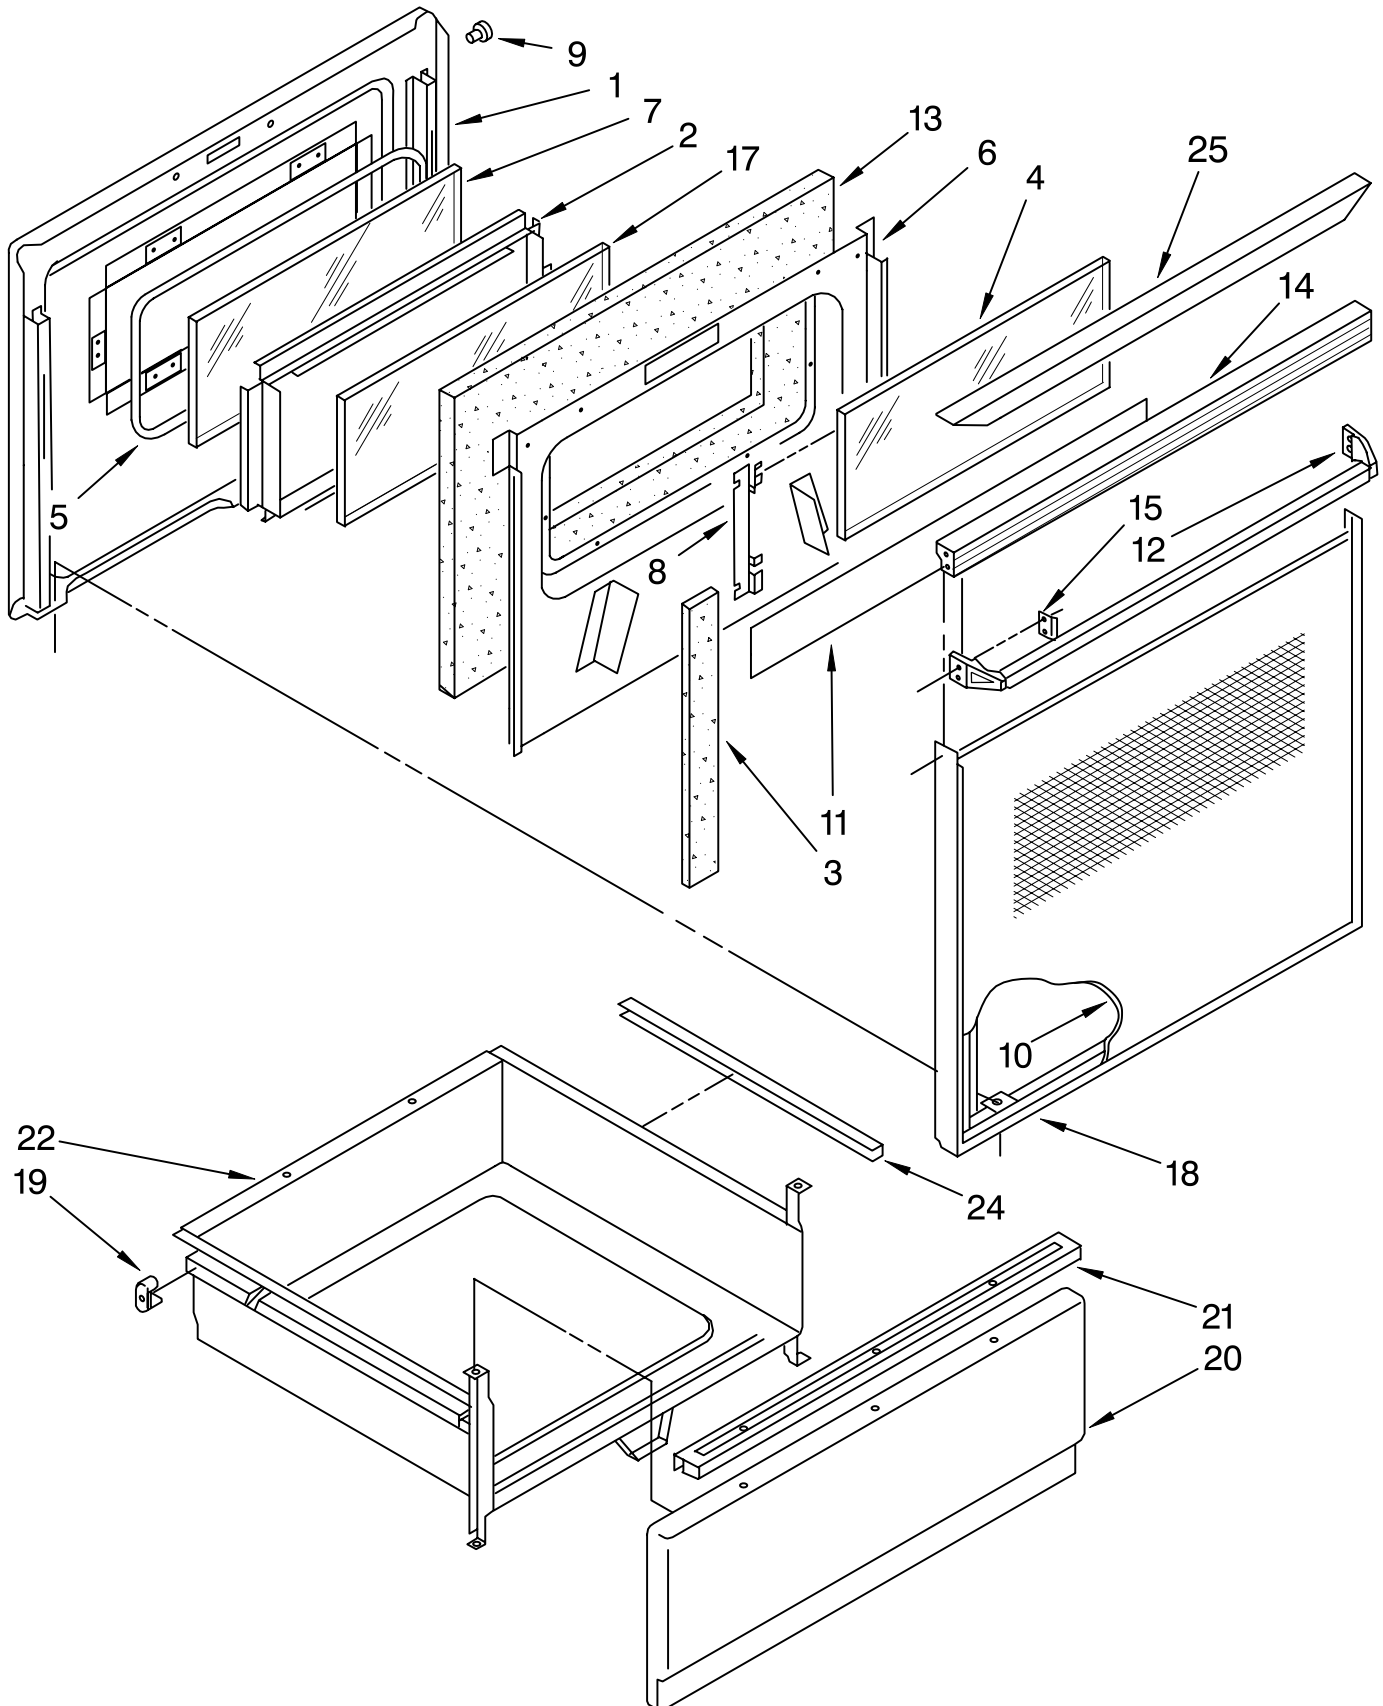

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172218	Liner, Door
2	3148234	Frame, Glass
	3148443	Screw (6)
3	3148441	Seal, Foam
4	3148178	Glass, Reflective
5	3148183	Seal, Window
6	3148159	Retainer, Insulation
	3148443	Screw (4)
7	313004	Glass, Inside
8	3148187	Retainer, Glass (2)
	3148443	Screw (4)
9	3148182	Bumper (4)
10		Glass, Door
	3148185	Black
	3149049	White
11	3148184	Foil
12		Handle, Door
	3148228	Black
	3149354	Platinum
	355515	Screw (4)
13	3147951	Insulation, Door
14		Top, Door
	3148223	Black
	3149355	Panoramic Grey
15	3148282	Clip (2)
17	313005	Glass, Outer
18	3148235	Frame, Glass
	3182345	Screw (3)
	3182346	Screw (3), Designer White Mdl
19	307980	Glide, Rear
	313349	Screw (2)
20		Panel, Drawer
	307935	White
	307939	Almond
	309923	black
	313349	Screw (3)
		8-18 x 1/2
21	3169105	Handle, Drawer
	313349	Screw (2)
22	327887	Drawer, Utility
24	309329	Protector, Drawer (2)
25	3181363	Cap, Top
		Designer White Mdl
	3182346	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN UNIT PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

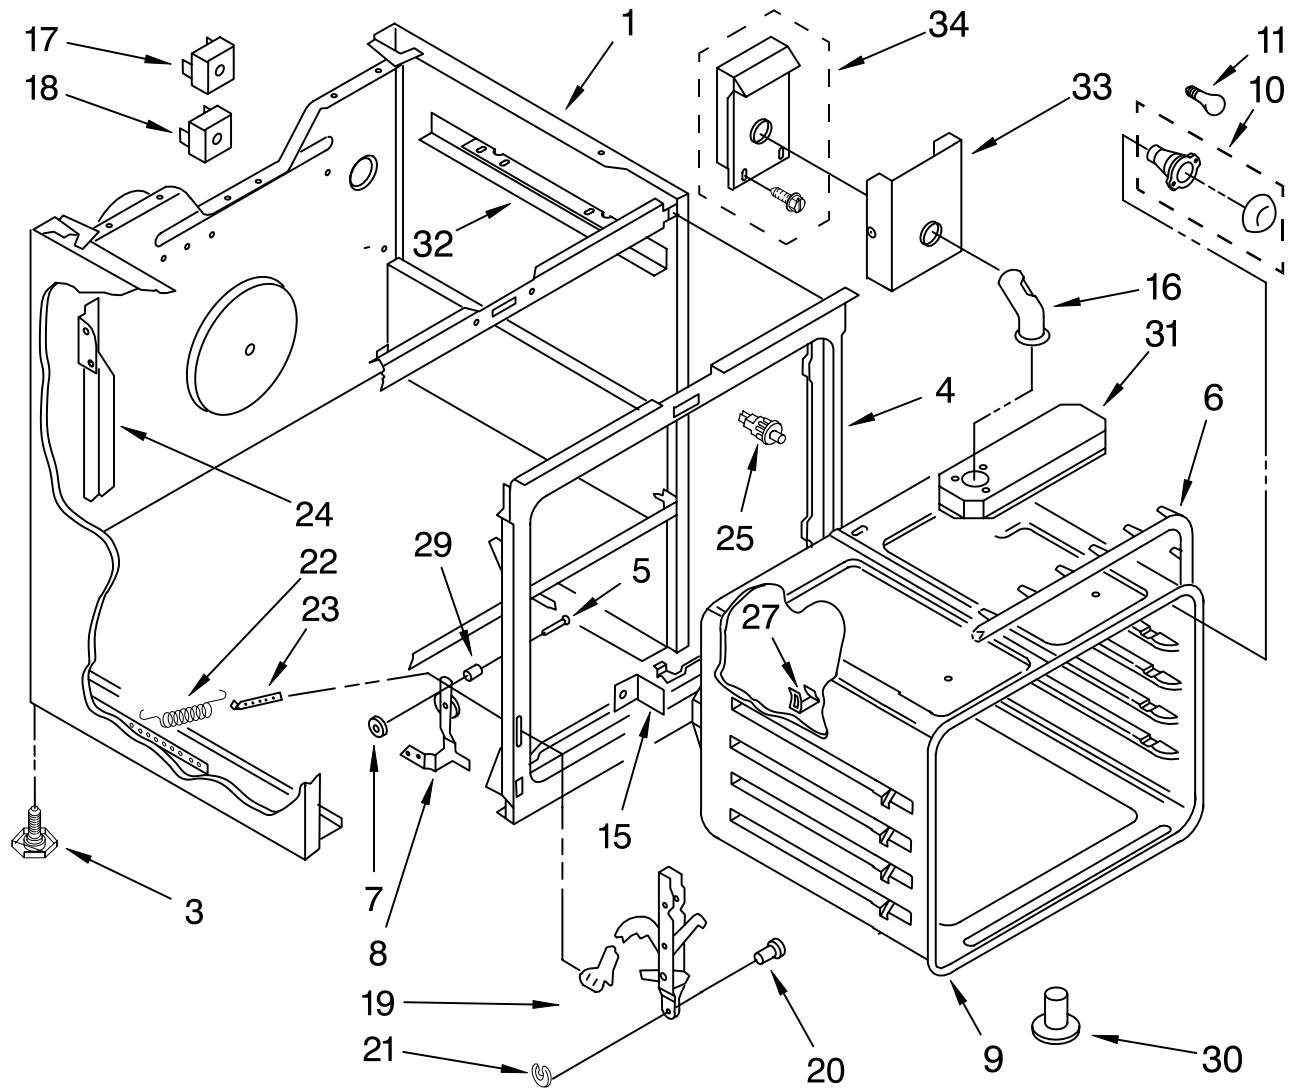

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN UNIT PARTS


For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			8	327890	Hinge, R.H.	23	308125	Anchor, Spring (2)
				327891	Hinge, L.H.	24	313196	Support, L.H. Channel
				343641	Screw, 10-16 x 1/2 (4)		313197	Support, R.H. Channel
1		Main Chassis	9	3176611	Oven (30" Pyro)		343641	Screw, 10-16 x 1/2 (4)
	330086	White		311056	Screw (3)	25	310345	Switch, Door
	330090	Almond	10	3150505	Socket Assembly	27	313382	Clip, Therm Bulb (2)
	3181515	black	11	311255	Bulb, Oven Light	29	309111	Snubber, Door (2)
	690989	Screw, 10-32 x 1/2	15	311220	Bracket, Oven Mounting	30	3169109	Tube, Vent
	343641	Screw, 10-16 x 1/2 (2)		343641	Screw, 10-16 x 1/2 (4)	31	3169129	Box, Vent
	247326	Screw 10-24x1/2	16	3148906	Vent, Oven		343641	Screw (3)
3	3150150	Leg Leveling (4)		253549	Screw, 10A x 1/2 (3)	32	3147646	Support, Chassis (2)
4	3172194	Frame, Front	17	314209	Switch, Broil		313638	Screw, (2) #8-18 x 1/2
	311056	Screw (2)		314215	Screw #6	33	3149006	Shield, Box
	3150537	Screw (1)	18	314210	Switch, Bake		98520	Screw (2)
5	307985	Pin, Hinge		314215	Screw #6	34	3171381	Box, Vent
6	3148284	Seal, Door	19	329710	Channel, Arm (2)		342055	Screw (2)
7	308306	Pushnut	20	307986	Hinge Pin (2)			
			21	307594	Ring, Retainer (2)			
			22	308126	Spring, Oven Door (2)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Model: RF366PXYW0, RF366PXYN0, RF366PXYB0, RF366PXYQ0
(White) (Almond) (Black) (Designer White)

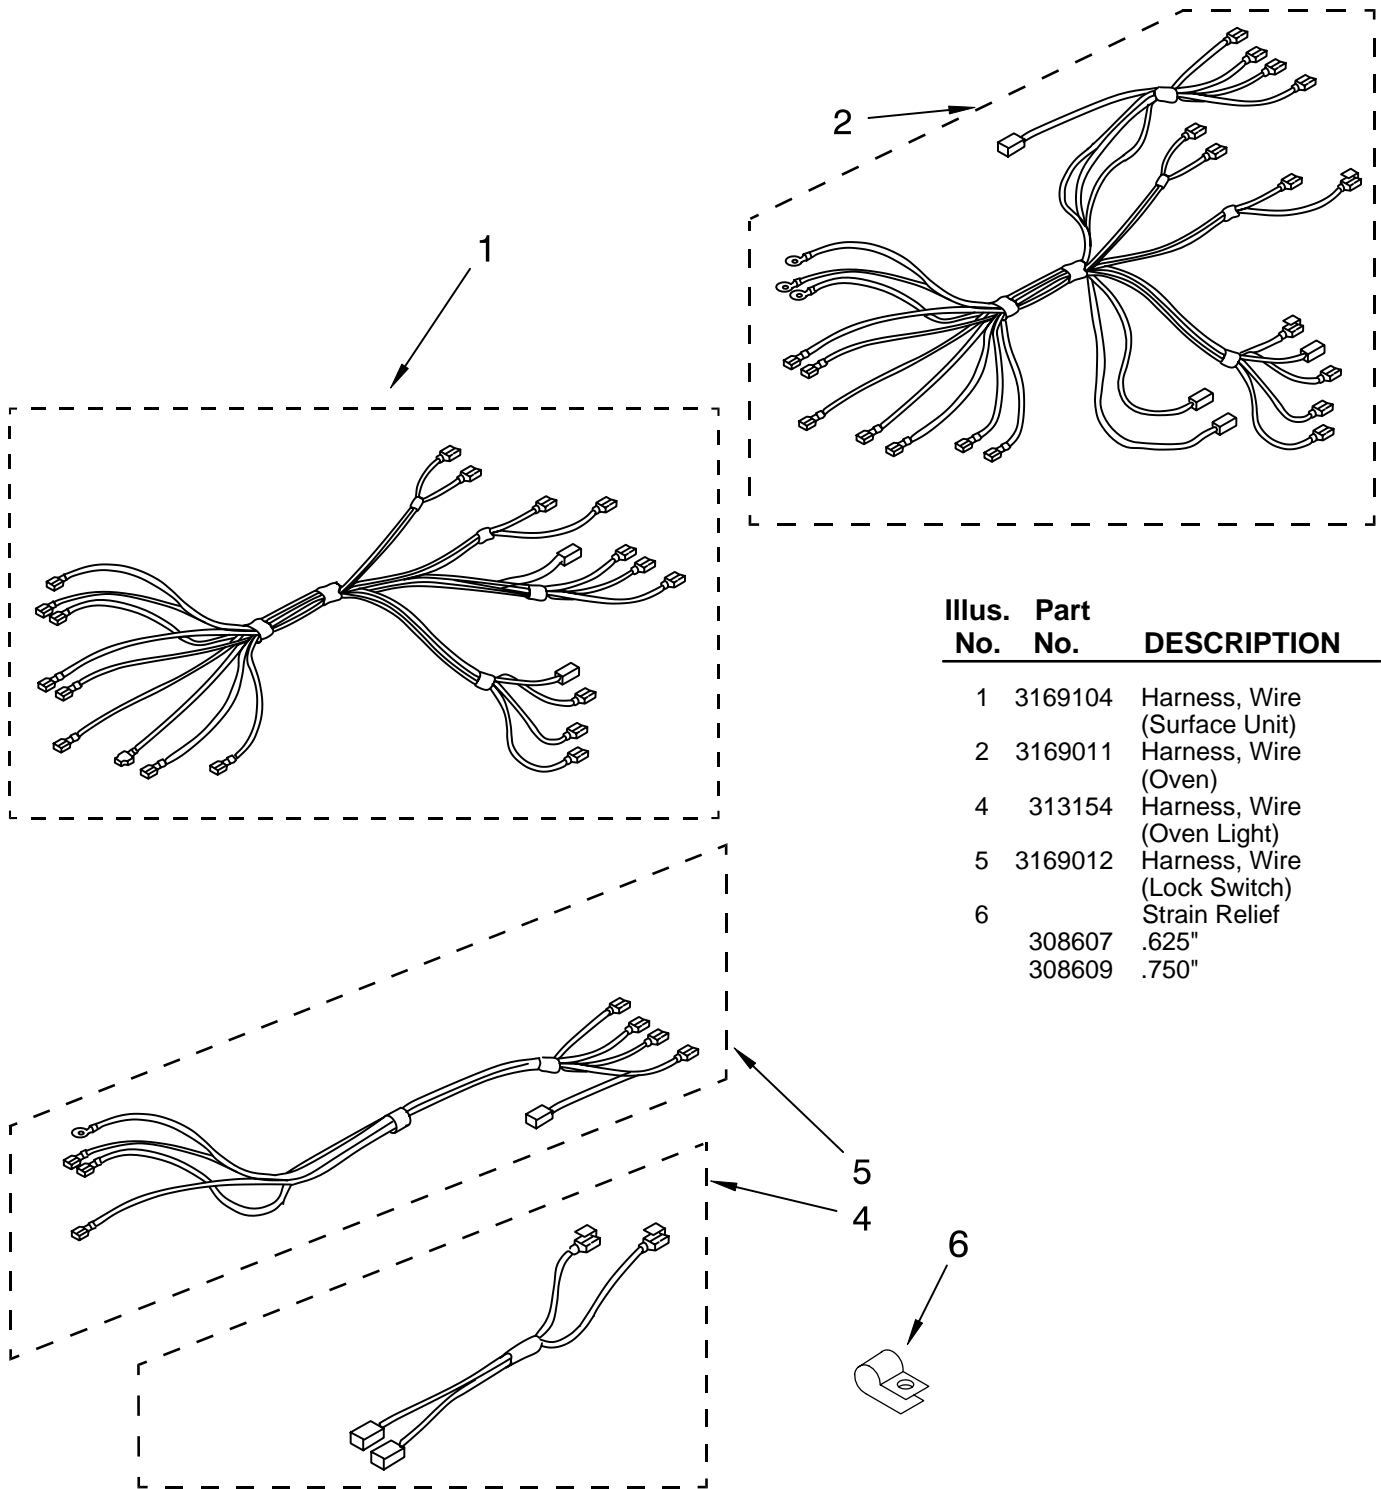

Illus. No.	Part No.	DESCRIPTION
1	3169104	Harness, Wire (Surface Unit)
2	3169011	Harness, Wire (Oven)
4	313154	Harness, Wire (Oven Light)
5	3169012	Harness, Wire (Lock Switch)
6		Strain Relief
	308607	.625"
	308609	.750"

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST